


Cora Bike Rack - CVR Rack Series Vertical Racks (CVR'3')


This instruction sheet is to be used for CVR3 Vertical Rack.

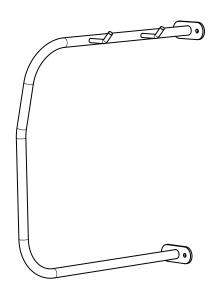

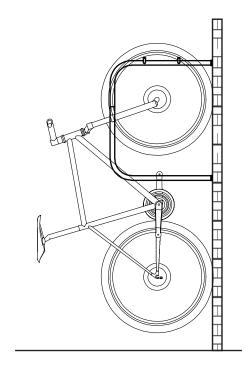

Components for CVR3 Rack used in assembly

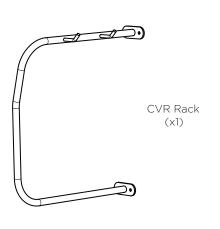

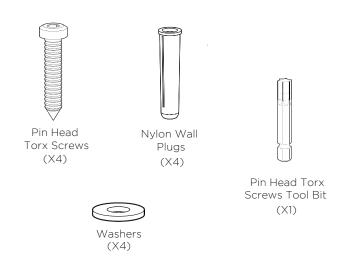

1. Site selection

When selecting a site for your new bicycle rack, the most important advice is;

Do not try to hide it, as it will not be used!

Suitable locations include:


- Adjacent to entrance doors and in line of sight of a window
- Near high pedestrian traffic
- Covered areas

Other things to remember;


- Where a rack is being installed at an existing location, the rack should be placed where bicycles are currently parked
- When using a garage location, it is recommended to use a parking bay that is nearest to an entrance door.

Cora Bike Rack - CVR Rack Series Vertical Racks (CVR'3')


2. Access and clearance

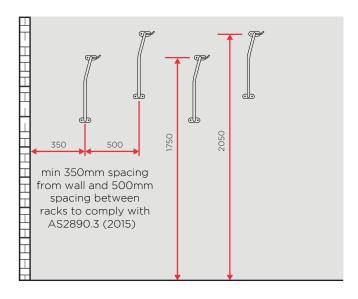


- If mounting multiple racks, measure mounting distance between racks and other obstructions and height from ground
- Reduced spacings of 400-500mm are possible where compliance with AS2890.3 (2015) is not required. Reduced spacing is less user friendly.

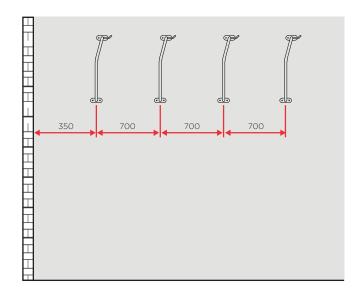

 If adjacent racks are all mounted at the same height, they must be positioned a minimum of 700mm centre to centre, and 350mm to any obstruction.

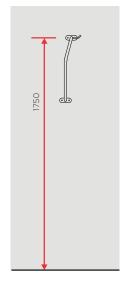


• If mounting only one rack, the rack should be fixed in lower position to minimise lifting for cyclist

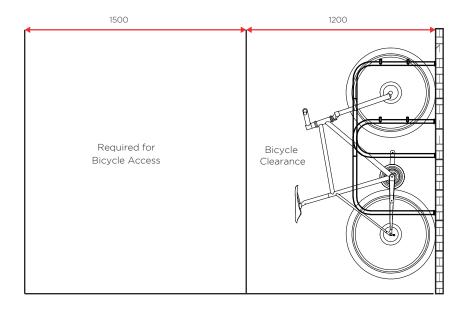


Cora Bike Rack - CVR Rack Series Vertical Racks (CVR'3')

3. Locate and measure suitable location

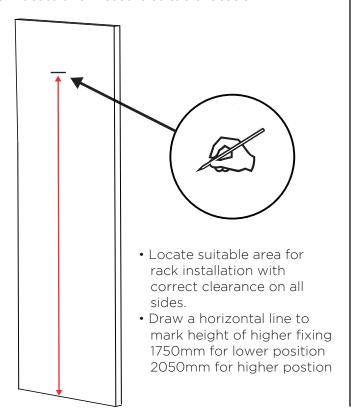


4. Mark and drill fixing points

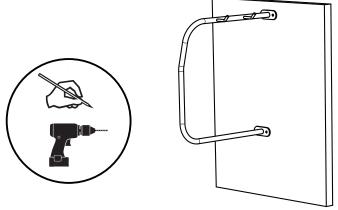

- Place rack in desired position and mark all fixing points with a suitable marker.
- Drill holes using a 10mm masonry drill bit to a depth of 40mm. For best results use a 6mm bit first to prevent wandering of the larger bit. Clear holes of dust.

Do not drill over plumbing and/or electrical conduits.


5. Fix rack into position

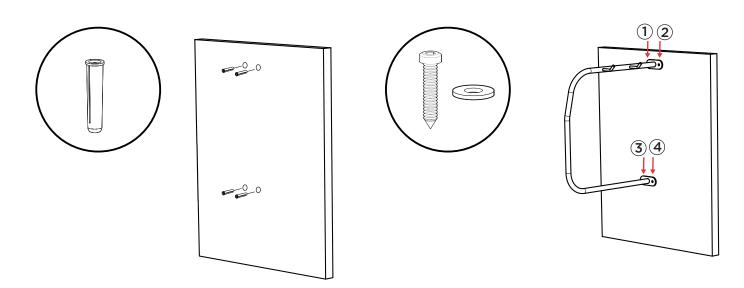

• Tap nylon sleeves into holes. Place rack in position and partially tighten screws starting from the top position. Once all nuts are on, continue to tighten until firm.

Cora Bike Rack - CVR Rack Series Vertical Racks (CVR'3')

6. Installation complete

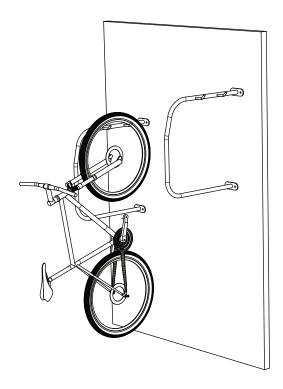

Installation of the Cora CVR3 rack is now complete











PH 1800 249 878

sales@cora.com.au www.cora.com.au